
1 Preparation


PREPARATION


Before the installation of the device, please check you have the following items on hand.

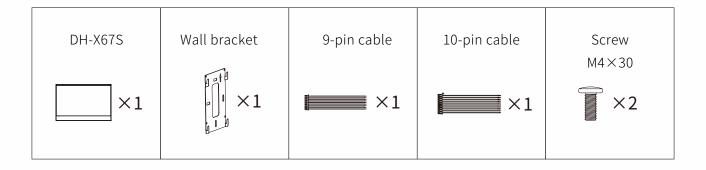

2 | Product Overview

PRODUCT OVERVIEW

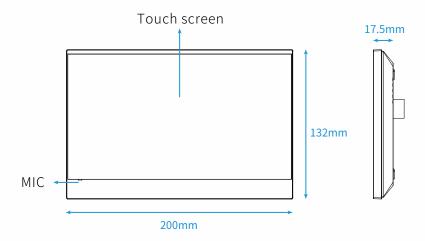


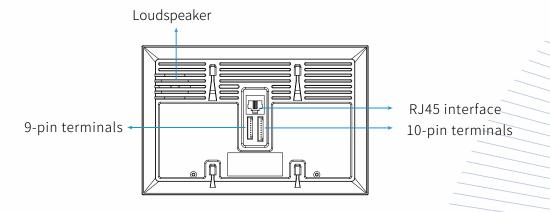

3 Installation


INSTALLATION


Bottom box embedded into the wall

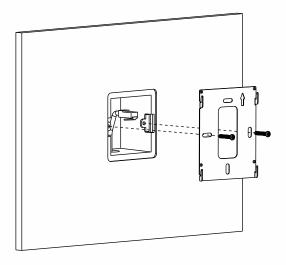

Step 1: All cables and cords go through the bottom box.

Step 2: Lock the wall bracket on bottom box with two M4×30 screws

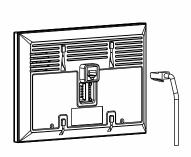

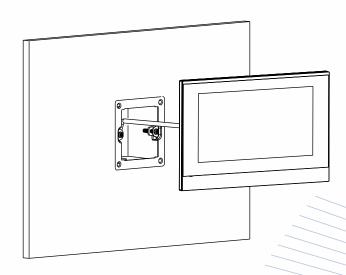


Step 3: Connect all cables and cords to corresponding interfaces of device.

Step 4: Attach the device on wall bracket and lock it with bracket hook.

4 Interfaces

INTERFACES

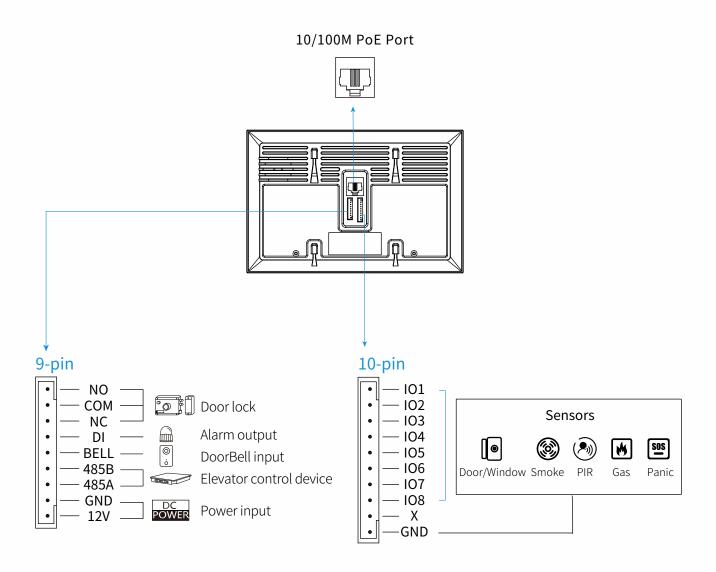



- Pin NO/COM is connected to the cathode lock;
- Pin NC/COM is connected to anode lock or magnetic lock;
- GND is for common ground cable, the the ground cable of 485 and BELL devices MUST share GND with X67S to ensure stable communications.

SPECIFICATIONS

5 | Specifications

OS: Linux

Display: 7 Inch LCD

Resolution:1024×600

Input power: DC12V / 1A

PoE: Support

• Front panel: ABS

Working Temperature: -10°C ~ 55°C

• Working Humidity: 10%~95%RH

• Equipment: 200×132×17.5mm

6 Functions

Video intercom

The visitors call from door phone, you can confirm the identity by video call and unlock the door.

Video Surveillance

You can monitor the video stream from IP camera connected to system.

Make calls

You can make audio call property management or the other tenants on this device.

Home Security

The indoor monitor can connect up to 8 alarm zones in home, different alarm status can be set.



Notice Information

Infromation contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, The update vision of this document can be viewed on NEXhome website: http://www.nexhome.ai ©Copyright 2022 NEXhome Ltd.All right reserved.

Fujian Nexhome Intelligent Technology Co.,Ltd.

Add.: No.33 Xingang Avenue, Shangjie, Minhou, Fuzhou, Fujian, 350108, China

Web: www.nexhome.ai